

Hazer Guide

Installation:

- Place Hazer in the desired position and plug into power
 - Unlike the viper the hazer doesn't take long to warm up it is usually ready within 60 seconds

Operation:

- Make sure that a "P" with a number is displayed on the LED screen
 - If the right screen is not displayed click the menu button to the far left until the correct screen is shown
- To start the haze press the arrow button to the far right
- The output of the haze can be changed by pressing the up and down buttons directly below the LED screen
 - The higher the number the larger the output of Haze
- If the Hazer is not pumping the smoke correctly double check that your fan speed is on the highest output
 - To do this cycle through the menu button until a "F" with a number is displayed on the screen.
 - Just to get the Hazer going set the fan speed to "F99"
 - This can be changed once it is verified that the hazer is working properly
- To turn off the hazer properly press the menu button until "OFF" is displayed on the screen and then press the arrow key.
 - A dot will appear on the display once this is shown it is safe to unplug the hazer